

## The MonoPulse Models AA & SA – Streaming Advice

This is generally based on Android phone, Tidal source, and Plusnet router

### Phone

Go to Connections – log in to local router. Needs code.

### Bluetooth without Wi-Fi

**Arylic** - select Bluetooth on IR control – takes time – then beeps, & Blue flashes.

**Phone settings** (cog) go to Connections, then Bluetooth. Select Soundsystem\_XXXX. Blue now continuous

Open **TIDAL**. My Collection. Playlists.

### Add Wi-Fi

Place router, speaker, & phone, about 2 metres apart if possible

**Re-set Arylic**. Speaker & Arylic on. Through Aux Out, push with thin stick for 10+ secs.

Voice “restored to factory settings”, then *tinkle* & “entering set-up. Follow instructions --”

**Phone** - open 4STREAM. **Check Arylic light blinking.**

Press “Add Device” & “Confirm Light Blinking”

Ignore glum face. Press “Pair with Wi-Fi”

Press “Settings” – shows available links - look for “SoundSystem\_XXXX”. Select

“You are now connected to your speaker. Follow instructions --” **Press** < (at bottom right)

Shows network - if needed log in – local router and its code - & press “Continue”

Voice - “Waiting for Wi-Fi connection” – “Connected to your Wi-Fi”. Press “Next”

“Name Device” screen – choose “SoundSystem\_XXXX” then press “Next” – now at **top right**

For TIDAL.

Press top left music sign – then TIDAL. User authorize or “Yes continue”. Chose “My Music”

### Wi-Fi already intalled

**Arylic** & speaker - **on** – wait for *tinkle*, then “Connected to your Wi-Fi”

**Phone** - select 4STREAM –press top left music sign. Select provider & service.

Plays chosen selection – then repeats. Phone can be turned off – then back - on 4STREAM

Go to TIDAL – My Collection – Playlists. (Also use IR for volume)

**Go to Wi-Fi**. Press Wi-Fi on IR Select 4STREAM on phone – goes to Music sign